

Manual Inagrit APP (version 1.2.1)

First you need to install the apk for android devices.

IMPORTANT: confirm that you accept the software or you need to go to the settings manually to accept the software.

Log in



Welcome to the application of Inagrit to manage your lighting devices.

If you open the application you find to buttons below: Sign in and Sign up.



Normally we already assigned an email address to you or your project. So it will be unnecessary to sign up. However, if you have a **NEW** project, please **SIGN UP** with an email and password you choose for the project and let us know. We will assign the devices to your new project.




Choose Sign in if you already got devices assigned to an email address.

SIGN IN

SIGN UP

 Sign up



To sign up we need following information: first and last name of the project owner, email address, password with confirmation.

First Name

Last Name

(*) Email

(*) Password

(*) Confirm Password

SIGN UP

Change user


Arundo Power Limited

Address: Rm.A&B, 15/F., Neich Tower, 128 Gloucester Rd., Wanchai, Hong Kong


Phone: +86 132 4763 5445 - bruno@arundopower.com

Bank account: Shanghai Commercial Bank: A/C Name: Arundo Power Limited


A/C No: 352-28-02244-6 - SWIFT: SCBKHKHHXXX - Bank Code: 025

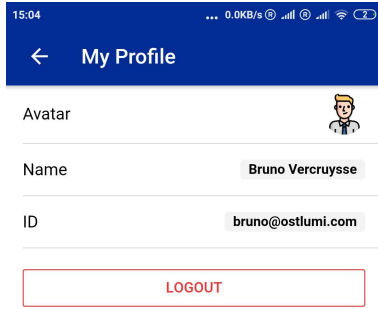

 You can switch between your own account and a project account by logging out from any account selection the account button at the bottom. Select logout to check out.




Sign in

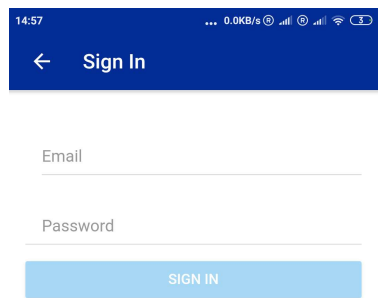

To sign in please put in your email address and password. Confirm below with sign in button.

Overview devices

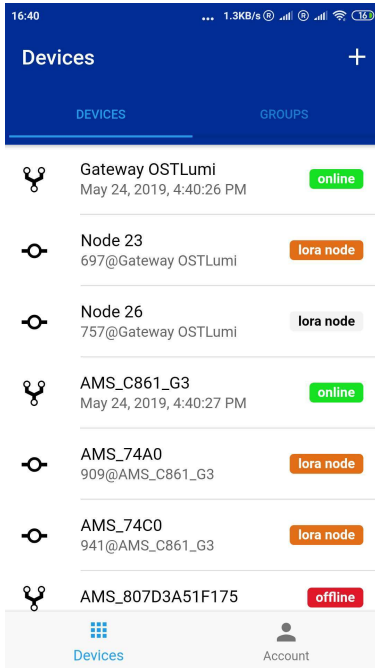


Once you signed in you get an overview of all your nodes and gateways assigned to that account.

You will see if a gateway is online (green color) or offline (red color).

You will first see all the LoRa nodes as grey. Later, if we scanned the nodes in the gateway or if we accessed a node, it will change to brown color indicating that the node is accessible.

Node information

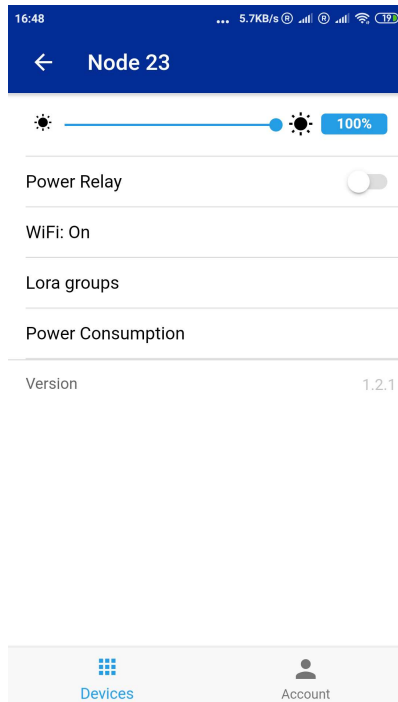

If you click on a node which is accessible from a gateway it will show the screen on the left. If not accessible, it will give a warning Gateway is offline.

You see the dimming level, the power on/off button. These are the basic functions to control the node and turn the node on/ off. With the shuffle bar you can dim the light or give a value when clicking on the value (see further).

The node is always accessible by INAGRIT wifi hotspot unless you turn this off with WiFi off.

With the button LoRa groups you can see to which groups the node is assigned already.


The power consumption button will give you extra information on the energy consumption.

Last line is the version of the software on the node.

Arundo Power Limited

Address: Rm.A&B, 15/F., Neich Tower, 128 Gloucester Rd., Wanchai, Hong Kong
Phone: +86 132 4763 5445 - bruno@arundopower.com
Bank account: Shanghai Commercial Bank: A/C Name: Arundo Power Limited
A/C No: 352-28-02244-6 - SWIFT: SCBKHKHHXXX - Bank Code: 025


Node information

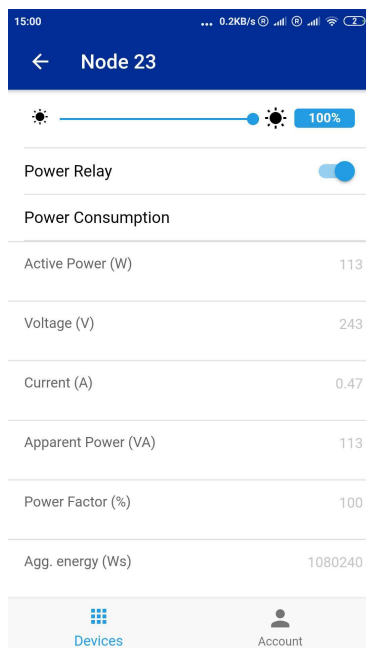

If you click on the Power consumption, the node will request the information and display it.
We show: active power, voltage, current, apparent power, power factor and used energy.


With the lowest button Calibrate you can refine the metering function with a calibration tool.

Node or Group dimming

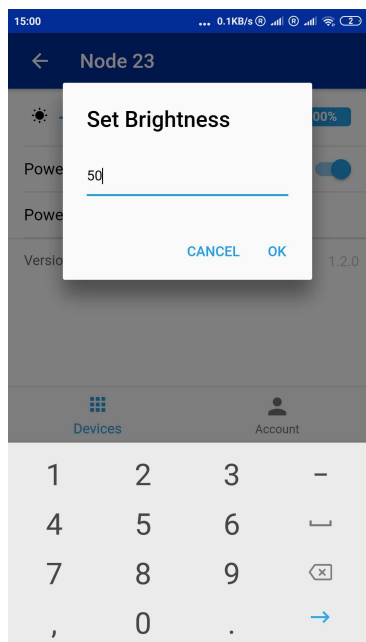

By pressing on the dimming level you can set a value with the numeric keyboard.
Another way to dim is to slide the slider bar with your finger horizontally.


Rename a Node or Gateway

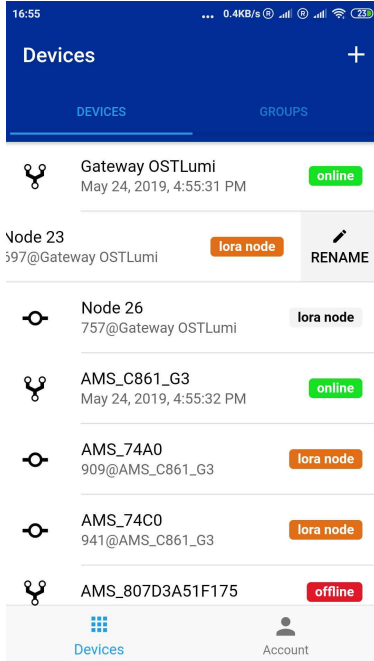

If you want to change the name from the default to any other name, select the node or gateway and slide it to the left. The rename button will appear.

Confirm rename and you can change to a new name.

Gateway information

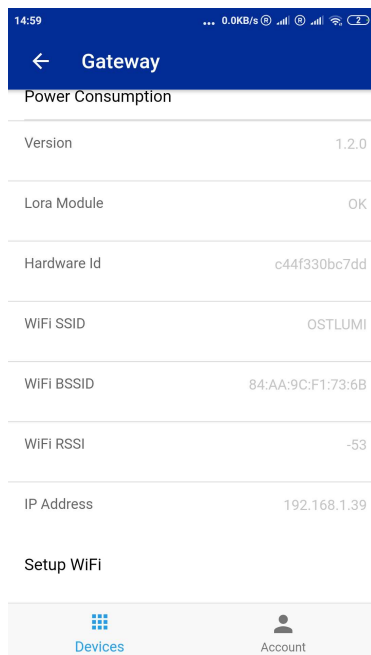

Select a gateway. The gateway will show the basic information like a node and show additional comments:

Is the status of the LoRa OK, Hardware ID, WiFi network name and ID, IP address.

On the bottom below there is a WiFi Manager. With this function button, you can change the WiFi network of the gateway to a local WiFi.

Scan nodes: You can through the gateway scan which nodes are accessible. After scanning they will change color (to brown) if the node is available.

Arundo Power Limited


Address: Rm.A&B, 15/F., Neich Tower, 128 Gloucester Rd., Wanchai, Hong Kong

Phone: +86 132 4763 5445 - bruno@arundopower.com

Bank account: Shanghai Commercial Bank: A/C Name: Arundo Power Limited

A/C No: 352-28-02244-6 - SWIFT: SCBKHKHXXXX - Bank Code: 025

WiFi settings Gateway

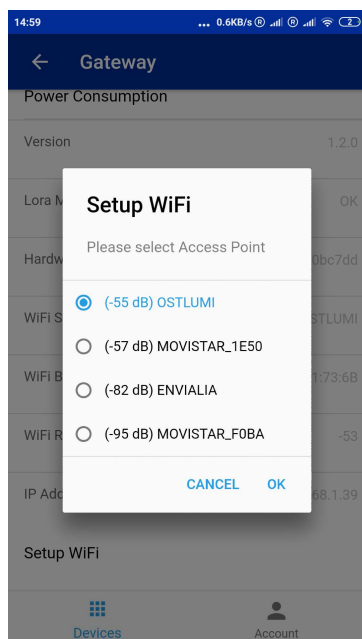

Default is INAGRIT with password: inagrid1234

So if you want to change the settings to a local project and for one or another reason you already changed the network to your local network, you need to do the following:


OR change the Setup WiFi again to the hotspot on your smartphone
OR change the hotspot of your smartphone to your local network settings. Remember that you will not be on this network unless out of range of the local network.

Once you are at a project, you can put on your WiFi hotspot, access the gateway and Setup the WiFi to the local WiFi.

From that moment you don't need your WiFi hotspot anymore and you will see that the name of the WiFi inside the gateway has changed.

Always doublecheck if it went over.

Rename or delete a Group

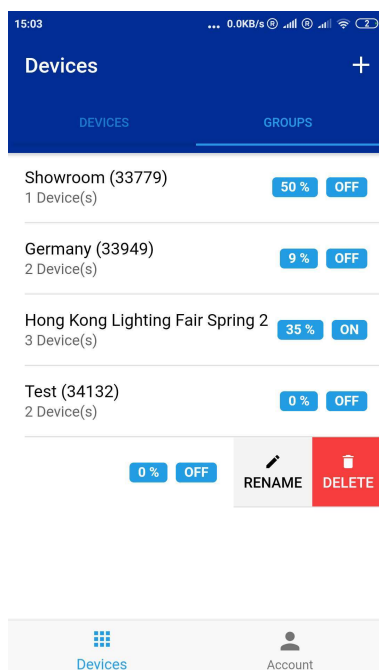


On the top of the page of devices you can select Groups.

Once you are in the list you can slide again to the left and select the Rename button to change the name of the Group or you can delete a group.


Remember: a group can only be deleted if the devices in the group are deleted FIRST.

Create a new Group

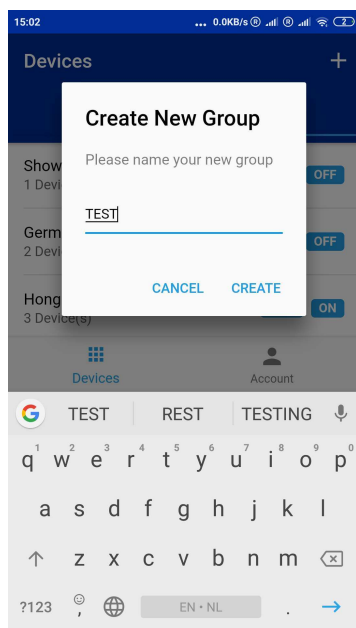

To create a new Group you simply click on the + button on the right top of the screen.
You can now assign a name to the Group by selecting create.


Manage devices in a Group

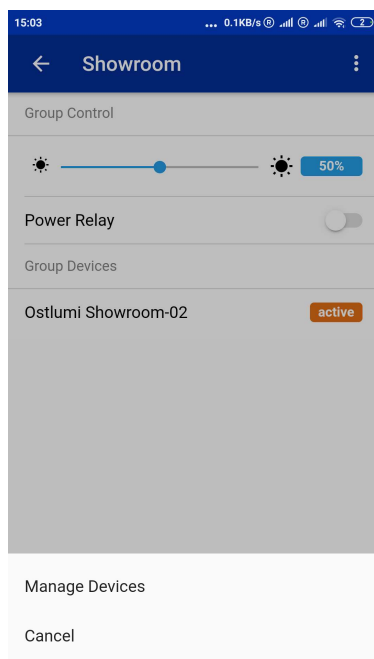

If you want to assign devices to a Group or delete devices from a Group, select the Group first.
After that you can select the 3 point button on the right top of the screen.
On the bottom the Manage Devices button will appear. Please press it to confirm.

Arundo Power Limited


Address: Rm.A&B, 15/F., Neich Tower, 128 Gloucester Rd., Wanchai, Hong Kong
Phone: +86 132 4763 5445 - bruno@arundopower.com
Bank account: Shanghai Commercial Bank: A/C Name: Arundo Power Limited
A/C No: 352-28-02244-6 - SWIFT: SCBKHKHHXXX - Bank Code: 025

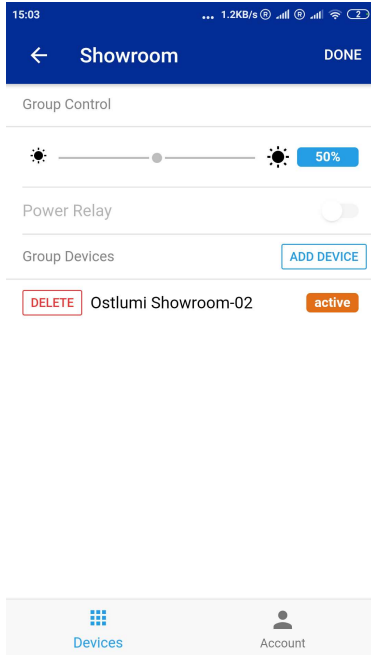

You can now delete a node by selecting the node to delete. When deleting the node, the gateway will confirm the removal of the node from the group.

Remember: the Group configuration of nodes only can be changed when the nodes are power on and accessible!

Add a Node to a Group

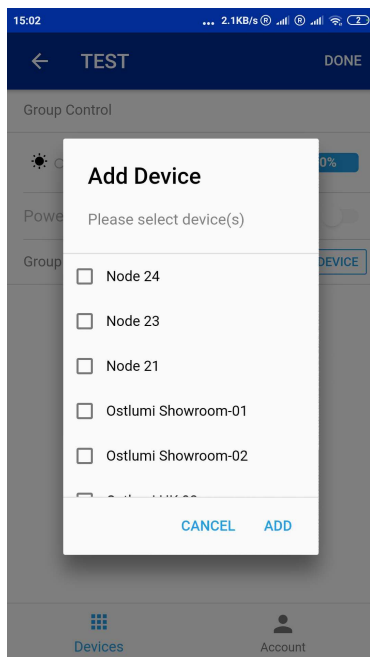

You can now add a node to the Group by pressing the add device button.

When assigning the node, the gateway will confirm the connection to the Group.

You can select multiple nodes in one time.

Remember: the Group configuration of nodes only can be changed when the nodes are power on and accessible!